


IMPORTED TYPE UTES FITTING INSTRUCTIONS


STEP 1.

Cut Sailtrack to inside measurement at front of ute.

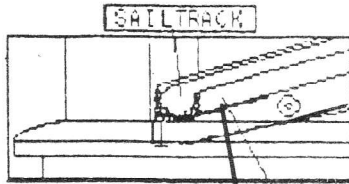


With poprivets supplied affix Sailtrack to front inside of the ute with the slot opening to top.

A suitable sealant should be used between body and Sailtrack for better weather proofing.

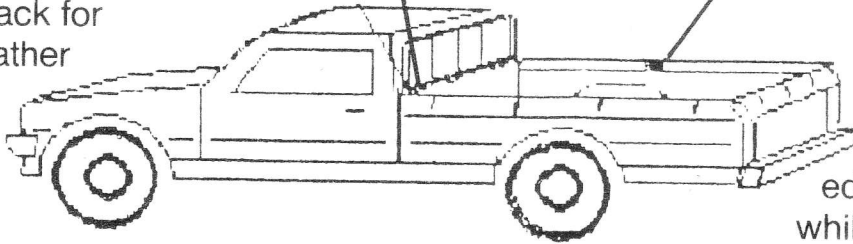

STEP 2.

Fit Bow Holders at centre of inside length measurement on each side.

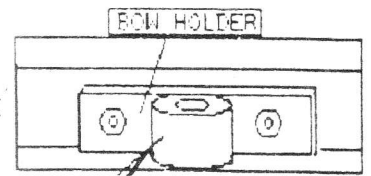

For utes needing 2 Bows fit holders at even intervals between front and rear inside measurement.


STEP 3.

Carefully feed rope edge of cover into Sailtrack pulling across with one hand while feeding rope edge in with other hand while standing inside ute.

STEP 4.


Fit Tonneau Cover Bow or Bows into Bow Holders and pull Tonneau Cover over Bow or Bows into position.

ELASTIC LOOP APPLICATION

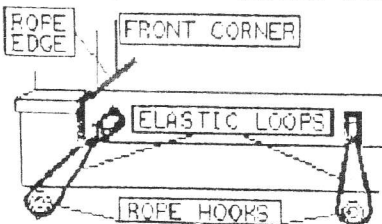


STEP 5.

For Tonneau Covers with **Elastic Loop Application** fix body hooks in line with elastic loops at bottom of loops for correct tension.

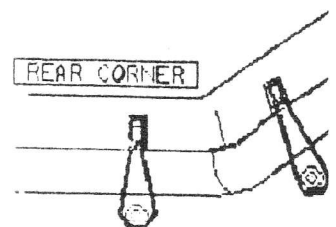


ROPE AND EYELET APPLICATION

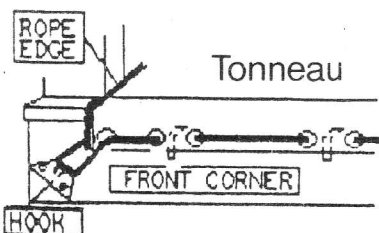

STEP 5.

While Tonneau is in position mark and affix ute body hooks to ute body at desired position.

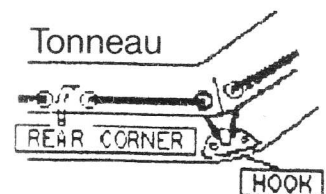

**KEMPTON
AUTO
ACCESSORIES**